

PRO¹

T755

Pro1 Technologies, Inc.

1111 S. Glenstone Ave., Suite 2-100
Springfield, MO 65804

Toll-Free: 1-888-776-1427 **Web:** www.pro1iaq.com

Hours of Operation: M-F 9AM - 6PM Eastern


| Table of Contents | Page |
|----------------------------|------|
| Thermostat Quick Reference | 2 |
| Thermostat Operation | 3 |
| Programming | 4-5 |
| Warranty Registration | 6 |

**Caution:****Equipment damage hazard**


Do not operate the cooling system if the outdoor temperature is below 50° F (10° C) to prevent possible compressor damage.

Una versión en español de este manual se puede descargar en la página web de la compañía.

Getting to know your thermostat

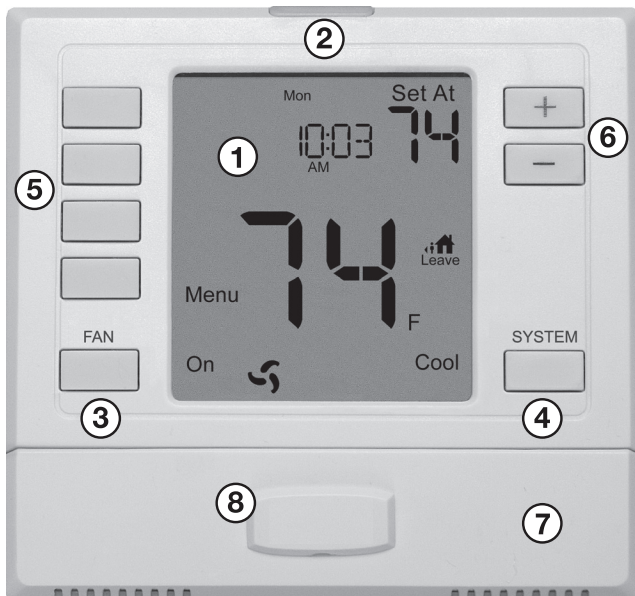

- ① LCD
- ② Glow in the Dark Light Button
- ③ Fan Button
- ④ System Button
- ⑤ User Program Buttons
- ⑥ Temperature Setpoint Buttons
- ⑦ Battery Door
- ⑧ Universal Private Label Badge

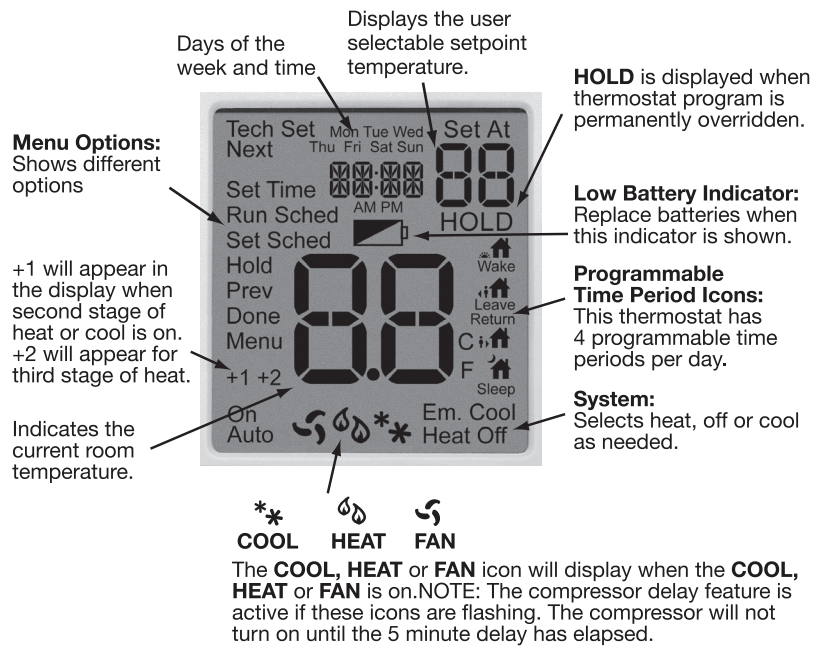


Important


The low battery indicator is displayed when the AA battery power is low. If the user fails to replace the battery within 21 days, the screen will only show the low battery indicator but maintain all functionality. If the user fails to replace the batteries after an additional 21 days (days 22-42 since first "low battery" display) the set points will change to 55°F(Heating) and 85°F(Cooling). If the user adjusts these setpoints away from these it will hold for 4 hours then return to either 55°F or 85°F. After day 42 the batteries must be replaced immediately to avoid freezing or overheating because the thermostat will shut the unit off until the battery is changed.

Battery information


Open the battery door on the front of the thermostat and insert 2 AA Alkaline batteries (included). High quality alkaline batteries are recommended.

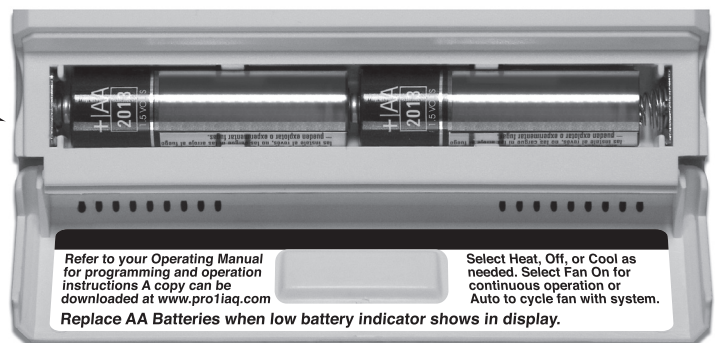

Easy to use controls

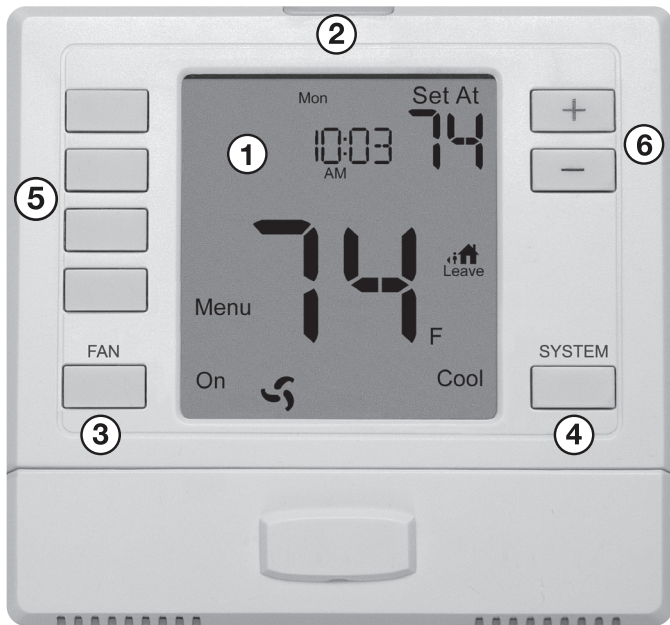

Caution:

When the battery icon  appears replace your AA batteries immediately. Failure to do so may result in your heating & cooling system becoming inoperable.

- ① LCD Display:**
See page 2 for details about this display read out and icons.
- ② Glow in the Dark Light Button:**
The glow in the dark light button will self illuminate for several hours after exposure to ambient light. This button turns on the display light when pressed.
- ③ Fan Button:**
Select **ON** or **AUTO**. The **ON** key will run the fan continuously. The **AUTO** key will cycle the fan on only when the heating or cooling system is on.

A Note About Programmable Fan:
The programmable fan feature will run the fan continuously during any time period it is programmed to be on. This is the best way to keep the air circulated and to eliminate hot & cold spots in your building.
- ④ System Button:**
Selects the operation mode of your HVAC system. Selecting **HEAT** turns on the heat mode. Selecting **COOL** turns on the air conditioning mode. Selecting **OFF** turns both heating and cooling off. (**EM Heat** will appear as an option if operating a heat pump. **EM Heat** setting will turn on Emergency Heat.)
- ⑤ User Buttons:**
Use these buttons to set up your programming options. Refer to the next page for instructions.
- ⑥ Temperature Setpoint Buttons:**
Press the + or - buttons to select the desired room temperature.

Set Time

Follow the steps below to set the current time:

1. Press **MENU**
2. Press **SET TIME**
3. Day of the week will be flashing.
Use the or key to select the current day of the week.
4. Press **NEXT STEP**
5. The current hour is flashing.
Use the or key to select the current hour. When using 12-hour time, make sure the correct a.m. or p.m. choice is selected.
6. Press **NEXT STEP**
7. Minutes are now flashing.
Use the or key to select current minutes.
8. Press **DONE** when completed



Important:

You will see a **TECHNICIAN SETUP** option after the **MENU** key is pressed.

This **TECHNICIAN SETUP** key is for installer configuration and should **NOT** be changed unless you consult your Professional Heating and Air Conditioning Technician.

Set Program Schedule 5+1+1

To customize your 5+1+1 program schedule, follow these steps:

Weekday:

1. Select **HEAT** or **COOL** using the **SYSTEM** key.
Note: You have to program heat and cool each separately.
2. Press **MENU**
3. Press **SET SCHED.** Note: Monday-Friday is displayed and the **WAKE** icon is shown. You are now programming the **WAKE** time period for the weekday setting.
4. Time is flashing. Use the or key to make your time selection for the weekday **WAKE** time period. Note: If you want the fan to run continuously during this time period, select **ON** with the **FAN** key.
5. Press **NEXT STEP**
6. The setpoint temperature is flashing. Use the or key to make your setpoint selection for the weekday **WAKE** period.
7. Press **NEXT STEP**
8. Repeat steps 4 through 7 for weekday **LEAVE** time period, for weekday **RETURN** time period, and for weekday **SLEEP** time period.

Saturday:

9. Repeat steps 4 through 7 for Saturday **WAKE** time period, for Saturday **LEAVE** time period, for Saturday **RETURN** time period, and for Saturday **SLEEP** time period.

Sunday:

10. Repeat steps 4 through 7 for Sunday **WAKE** time period, for Sunday **LEAVE** time period, for Sunday **RETURN** time period, and for Sunday **SLEEP** time period.

Temporary and Permanent Hold Feature

Temporary hold: The thermostat will display **HOLD** and **RUN SCHED** on the bottom of your screen when you press the **+** or **-** key. If you do nothing, the temperature will remain at this setpoint temporarily for 4 hours. Your program setpoint will then replace your temporary setpoint.


Permanent hold: If you press **HOLD** key at the bottom of your screen, you will see **HOLD** appear below the setpoint temperature in the display. The thermostat will now permanently stay at this setpoint and can be adjusted using the **+** or **-** keys.

To return to program: Press the **RUN SCHED** key at the bottom of your screen to exit either temporary or permanent hold.

Filter Change Reminder

If your installing contractor has configured the thermostat to remind you when the air filter needs changed, you will see **FILT** in the display when your air filter needs changed. **FILT** will be shown in the display after your system has run long enough to require an air filter change.

Resetting the filter change reminder: When **FILT** reminder is displayed, you should change your air filter and reset the reminder by holding down the second button from the top of the thermostat for 3 seconds.

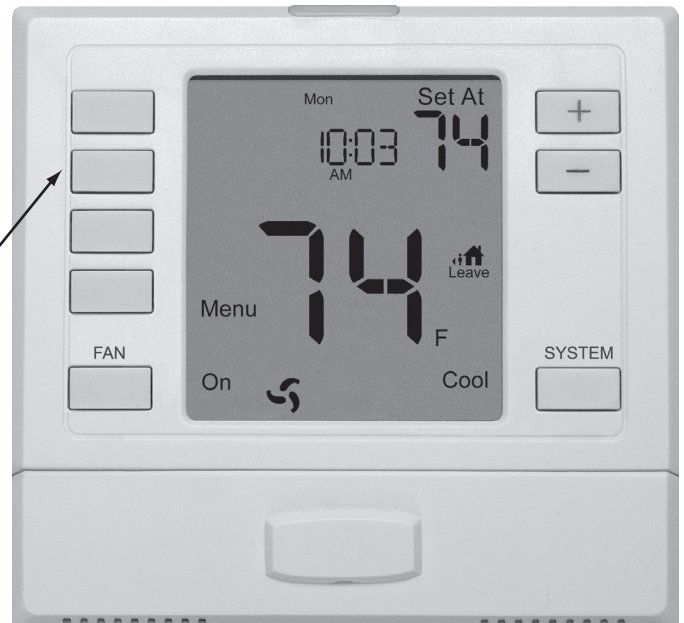

Warranty Registration:

Your new thermostat has a 5 year limited warranty. You must register your warranty within 60 days of installation. You can register your new thermostat in 2 ways.

① Go to our company's website, and fill out a short registration form online.

- or -

② Complete the form below and mail it to the address shown.



Warranty Registration:

Name: _____

Address: _____

City: _____

State: _____

Zip: _____

Thermostat Model: _____

Date Installed: _____

Complete form and mail to:

Thermostat Warranty Registration

1111 S. Glenstone
Suite 2-100
Springfield, MO 65804